



Create Prime Cost Sum

For Normal Users

Powered by:



GLOBAL PCK SOLUTIONS SDN BHD (973124-T)

3-2 Jalan SU 1E, Persiaran Sering Ukay 1

Sering Ukay, 68000 Ampang, Selangor, Malaysia

Tel :+603-41623698 Fax :+603-41622698

Email: info@pck.com.my


Website: www.BuildSpace.my

(BuildSpace Version 3.5)

Last updated: 17/11/2021

Create Prime Cost Sum

1. Click "Maintenance"
2. Click "Templates"
3. Click "Master Cost Data"

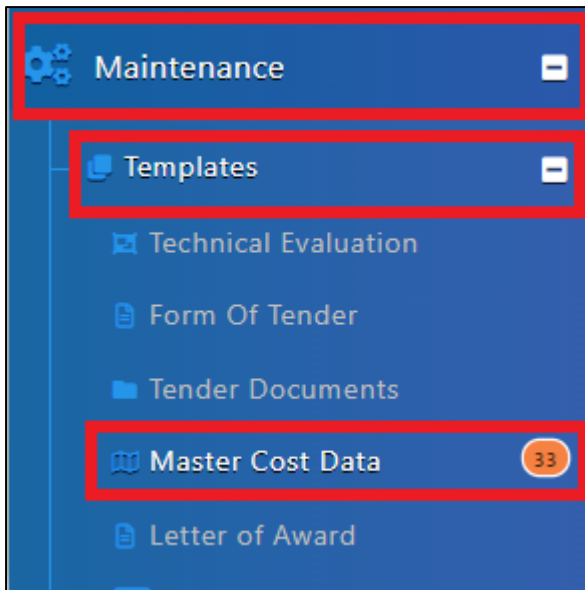

4. Click View



5. Click "Prime Cost Sum"

No.	Description	Type
	Provisional Sum	Provisional Sum
	Prime Cost Sum	Prime Cost Sum
	Project Rates Analysis	Project Rates Analysis
	Standard Items	

6. Select Row, Press "Enter" to key in and press "Enter" to save

